

DIAGRAM 1.0


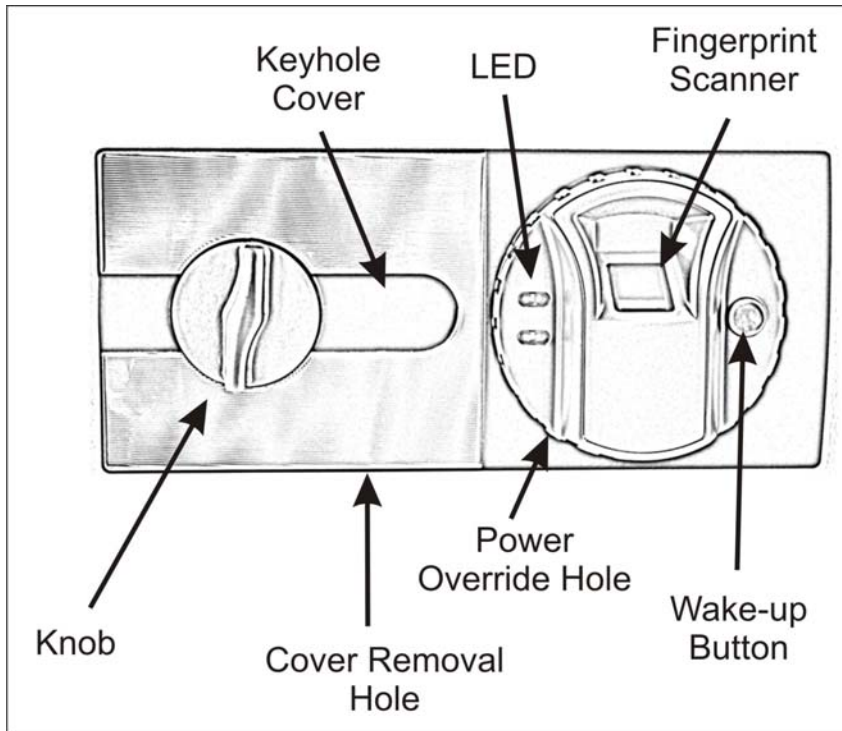


DIAGRAM 2.0

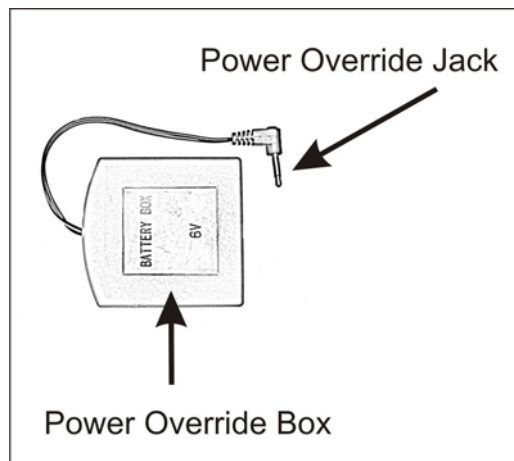

**WELCOME:**

**STEP 1 – OPENING THE SAFE:**

1. PRESS THE **WAKE-UP BUTTON**.
2. PLACE YOUR FINGER ON THE **FINGERPRINT SCANNER** UNTIL THE **LED** TURNS **GREEN** FOLLOWED BY A LONG BEEP.
3. REMOVE YOUR FINGER FROM THE **FINGERPRINT SCANNER**.
4. TURN THE **Knob** CLOCKWISE (RIGHT) AND OPEN THE DOOR.

**NOTE: SAFE WILL OPEN WITH ANY FINGER IF NO FINGERPRINT IS ENROLLED.**

**NOW YOU ARE READY TO ENROLL YOUR OWN FINGERPRINT.**

**ENROLLING:**

**STEP 2 – ENROLLING THE FIRST FINGERPRINT**

1. OPEN THE SAFE BY FOLLOWING **STEP 1**.
2. PRESS THE **SETUP BUTTON** (LOCATED IN BACK OF DOOR), THE **FINGERPRINT SCANNER** WILL FLASH **RED**.
3. **NOW:** (WHILE SCANNER LIGHT IS FLASHING **RED**)
  - a. PLACE YOUR FINGER ON THE **FINGERPRINT SCANNER**, WAIT FOR ONE BEEP AND **LED** TURNS **GREEN**.
  - b. KEEP YOUR FINGER ON THE **FINGERPRINT SCANNER**, WAIT FOR TWO BEEPS AND THE **LED** FLASHES **GREEN** TWICE.
  - c. REMOVE YOUR FINGER FROM THE **FINGERPRINT SCANNER**.
  - d. YOUR FINGER IS NOW ENROLLED.

**STEP 3 – ENROLLING ADDITIONAL FINGERPRINTS**

1. OPEN THE SAFE BY FOLLOWING **STEP 1**.
2. PRESS THE **SETUP BUTTON**, THE **FINGERPRINT SCANNER** WILL FLASH **RED**.
3. **NOW:** (WHILE SCANNER LIGHT IS FLASHING **RED**)
  - a. PLACE YOUR FINGER ON THE **FINGERPRINT SCANNER**, WAIT FOR ONE BEEP AND **LED** TURNS **GREEN**.
  - b. REMOVE YOUR FINGER FROM THE **FINGERPRINT SCANNER** FOR TWO SECONDS.
  - c. PLACE YOUR FINGER ON THE **FINGERPRINT SCANNER** FOR THE SECOND TIME, WAIT FOR TWO BEEPS AND THE **LED** FLASHES **GREEN** TWICE.
  - d. REMOVE YOUR FINGER FROM THE **FINGERPRINT SCANNER**.
  - e. THE ADDITIONAL FINGERPRINT IS ENROLLED.

**NOTE: TO KEEP ENROLLING MORE FINGERPRINTS, REPEAT **STEP 3**.**

#### DELETING:

##### STEP 4 – DELETING FINGERPRINTS:

1. PLEASE FOLLOW **INITIALIZATION PROCESS**.

**NOTE:** YOU CANNOT DELETE INDIVIDUAL USERS. YOU MUST DELETE ALL USERS.

#### INITIALIZING:

##### RESTORING FACTORY SETTING:

1. OPEN THE SAFE BY FOLLOWING **STEP 1**.
2. OPEN BATTERY COVER. (BACK OF THE DOOR)
3. REMOVE ONE BATTERY FROM THE BATTERY TRAY.
4. PRESS AND HOLD THE **WAKE-UP BUTTON** FOR THREE SECONDS, THEN RELEASE.
5. PRESS AND HOLD THE **SETUP BUTTON**. WHILE HOLDING THE **SETUP BUTTON** INSERT THE BATTERY BACK TO THE BATTERY TRAY.
6. KEEP HOLDING THE **SETUP BUTTON** UNTIL THE **LED** FLESHES **GREEN** TWICE AND 2 BEEPS WILL SOUND.
7. RELEASE THE **SETUP BUTTON** AND THE SAFE IS INITIALIZED!

#### EMERGENCY OPENING:

##### KEY OVERRIDE:

1. INSERT THE **POWER OVERRIDE JACK** INTO THE **COVER REMOVAL HOLE** AND PUSH UPWARDS.
2. GENTLY REMOVE THE **KEYHOLE COVER** AND INSERT THE TUBULAR KEY.
3. TURN THE KEY CLOCKWISE (RIGHT) AND THEN TURN THE KNOB TO OPEN THE SAFE.

##### POWER OVERRIDE:

1. INSTALL 4 NEW BATTERIES IN THE **POWER OVERRIDE BOX** AND PLUG THE **POWER OVERRIDE JACK** INTO THE **POWER OVERRIDE HOLE**.
2. OPEN THE SAFE BY FOLLOWING **STEP 1**.
3. OPEN BATTERY COVER AND INSTALL 4 NEW BATTERIES.
4. CLOSE BATTERY COVER, THE SAFE GOES BACK TO NORMAL OPERATION MODE.

**NOTE:** THE SAFE KEEPS THE FINGERPRINTS IN MEMORY UP TO 6 MONTHS WITHOUT POWER.



# USER'S MANUAL FOR FINGERPRINT SAFE

MODELS:  
HZ-30  
HZ-34  
HZ-53